

RS - 20/20 F & RS - 20/20 T



Caldera mural de gas

Instrucciones de Funcionamiento,
Limpieza y Mantenimiento para
el **USUARIO** Página 3



Wall-mounted gas boiler

Operating, Cleaning
and Maintenance Instructions
for the **USER** Page 4



Chaudière murale à gaz

Instructions de Fonctionnement,
de Nettoyage et de Maintenance
pour l'**USAGER** Page 5



Wandgaskessel

Betriebs-, Reinigungs-
und Wartungsanleitung
für den **BENUTZER** Seite 6-7



 
Caldaia murale a gas

Funzionamento ed Istruzioni
per la Pulizia e la Manutenzione
per l'**UTENTE** Pagina 7-8




Caldeira mural a gás

Instruções de Funcionamento,
Limpeza e Manutenção
para o **UTENTE** Página 8-9




RS-20/20F.0004	RS-20/20F.0604	RS-20/20F.0204	RS-20/20F.0804	RS-20/20F.0404	RS-20/20F.0004
RS-20/20T.0005	RS-20/20T.0605	RS-20/20T.0205	RS-20/20T.0805	RS-20/20T.0405	RS-20/20T.0005

Ⓛ DM/029 664

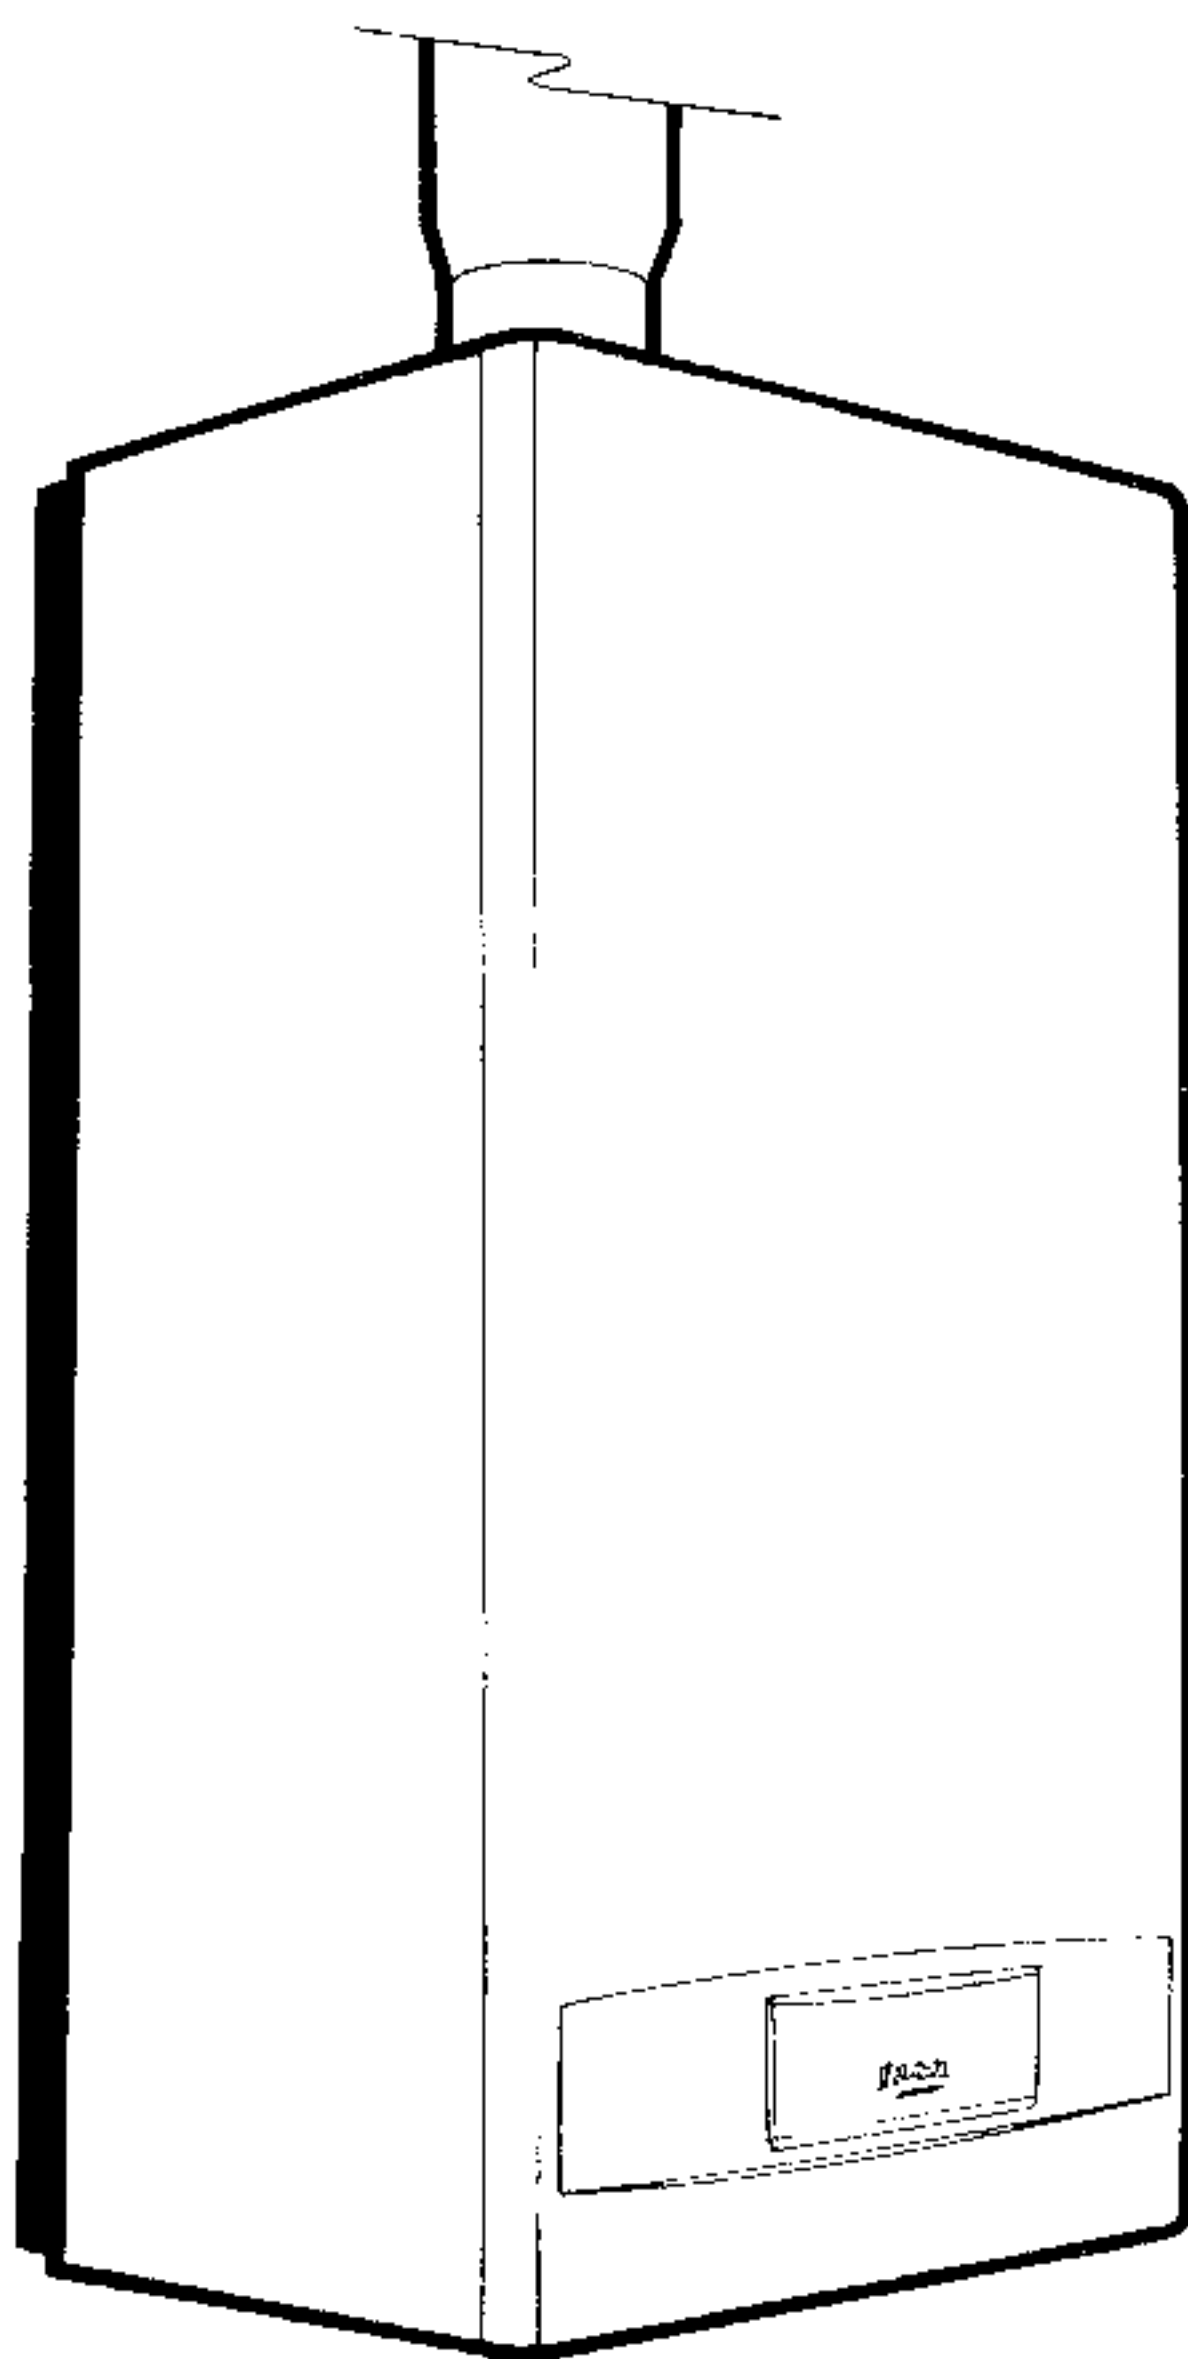

RS-20/20 T

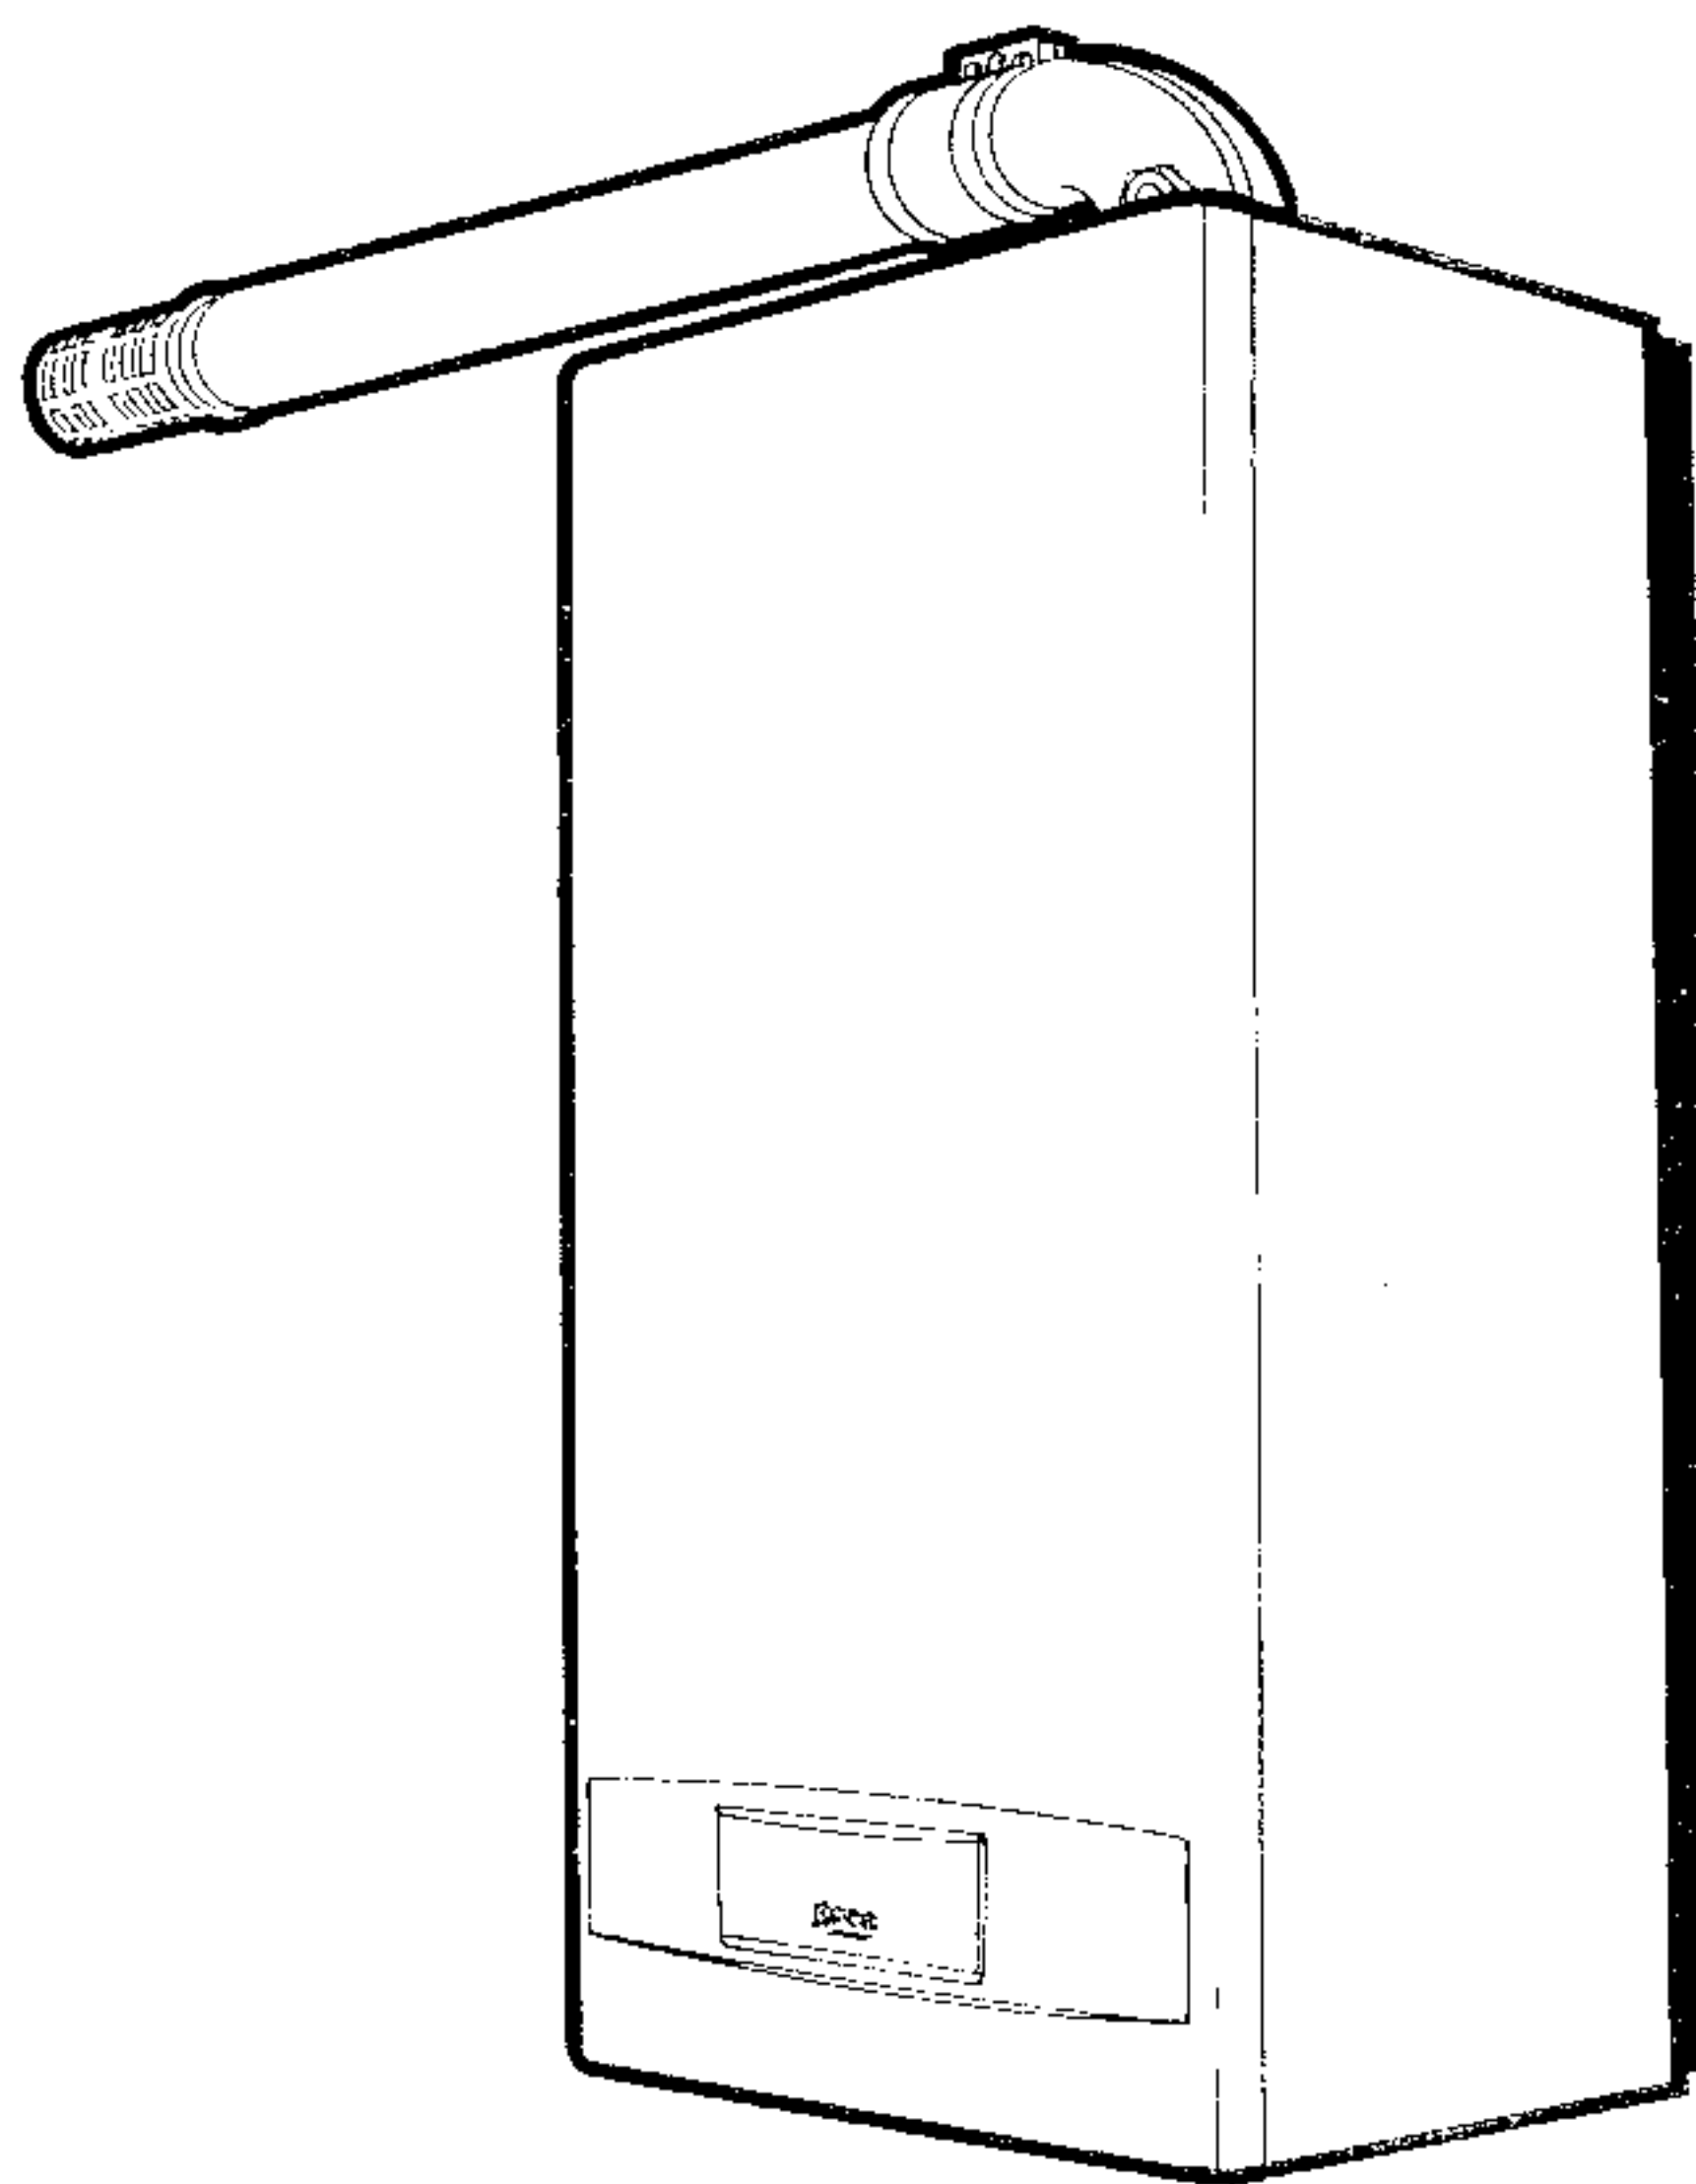

RS-20/20 F